


Matrix™ INSTALLATION GUIDE • PARTS • 2400 x 2400


*Applicable to 12mm and 24mm

PACK INCLUDES


MATRIX BAFFLES

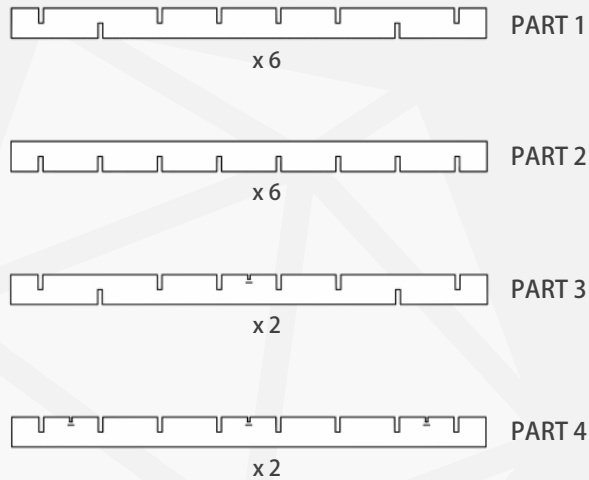

CEILING STENCIL

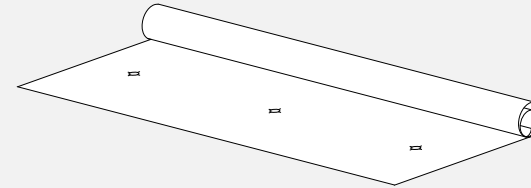


SCREWS




M4 Screws



Drywall anchors



SUSPENDED FIX x 8

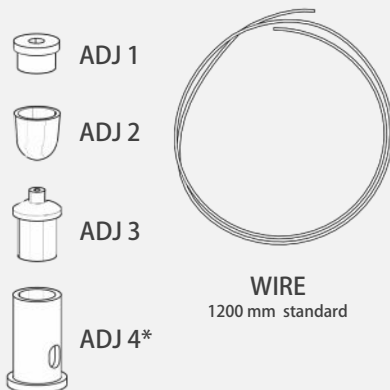

DIRECT FIX x 8




NOT INCLUDED



Phillips



Pencil



Laser



Measuring tape



2 x person
assembly
recommended




2 x ladder
recommended

*Already attached to Matrix

*Applicable to all sizes

LASER METHOD 1.

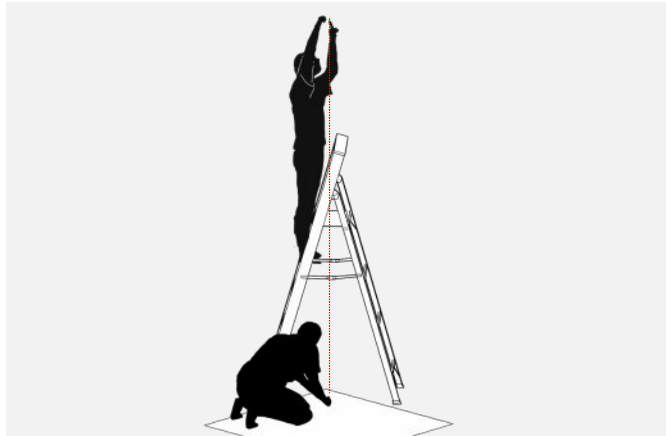


Lay supplied stencil on ground directly below ceiling surface you would like to install your Vista panel. Point laser vertically on each marked spot on the stencil while the second person marks the laser spots on the ceiling using a ladder. Apply this method to each attachment spot.

MANUAL METHOD 1.



Hold stencil to ceiling, marking all fitment locations on ceiling. If unable to use stencil, use measurements marked on stencil and manually measure and transfer markings.

SUSPENDED FIX 2.

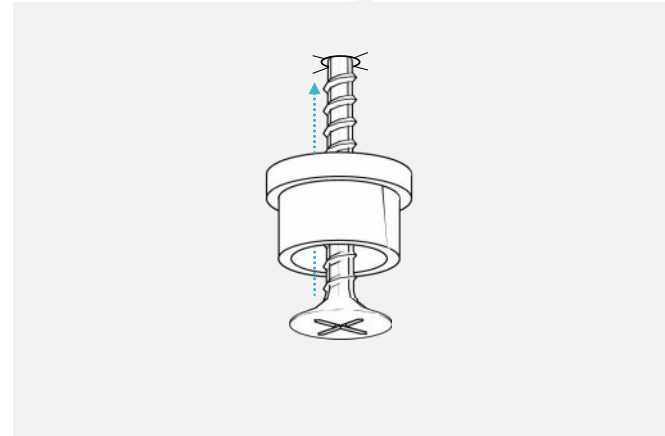


Insert supplied screws* into adjustment 1 and screw into ceiling at marked spots.

*Use appropriate anchor depending on ceiling material.

Go to Page 4 for
mounting
instructions

DIRECT FIX 2.

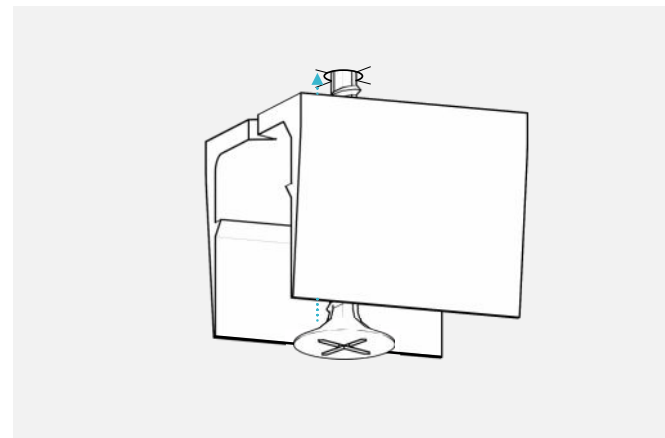

Insert supplied screws* into adjustment 1 and screw into ceiling at marked spots.

*Use appropriate anchor depending on ceiling material.


Go to Page 5 for
mounting
instructions

Matrix™ INSTALLATION GUIDE • MATRIX ASSEMBLY • 2400 x 2400

*Applicable to 12mm and 24mm


Assemble me
near place of
installation!

1.

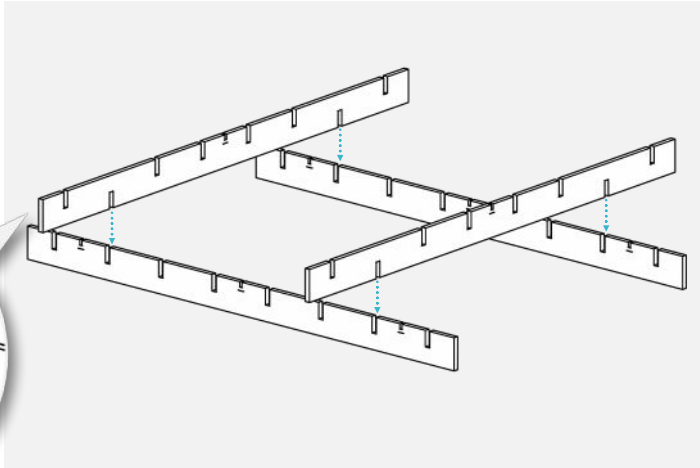


Place 2 x (Part 4) on flat surface.
Align 2 x (Part 3) perpendicular to part 4.
Slide into all slots until flush.

2.

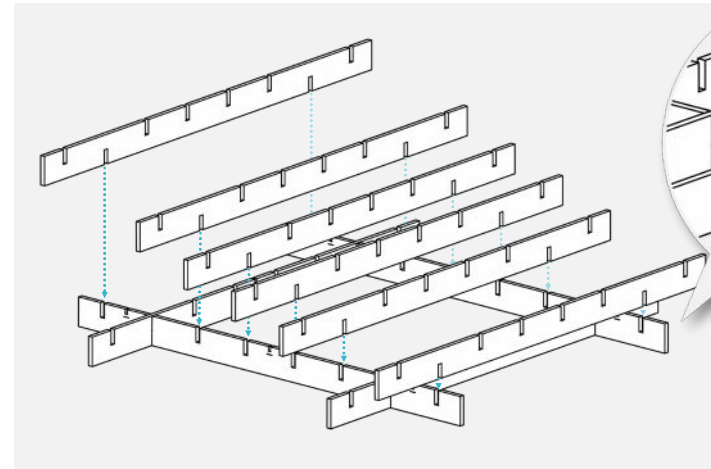


Align 6 x (Part 1) parallel with Part 3.
Slide into all slots until flush.
When slotting in the fins, push down gently and evenly across
length to avoid damage.

3.

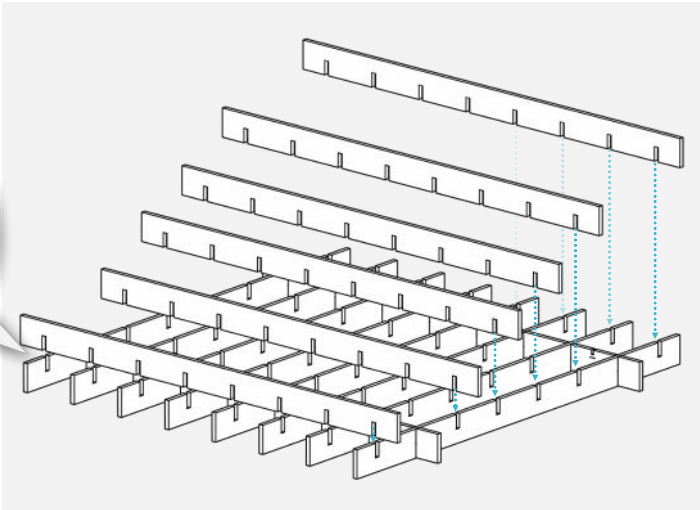

Align 6 x (Part 2) parallel with part 4.
Slide into all slots until flush.


4.

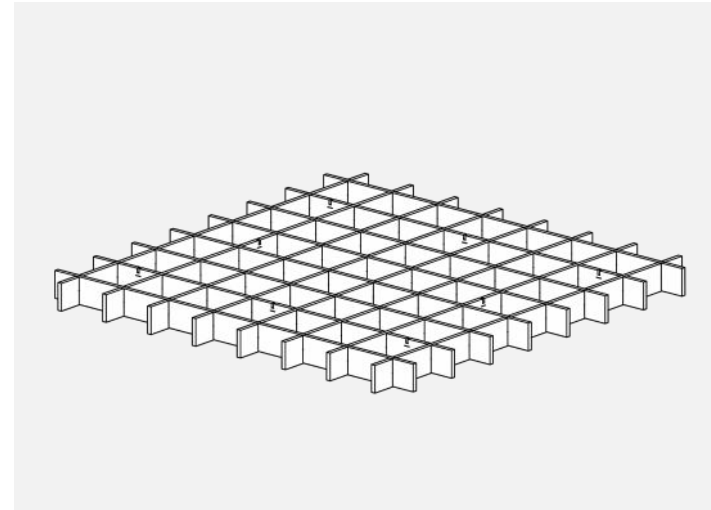

Finished baffle without wire attachment.


5.

Tip!
To extend, pull metal
gizmo with finger
nail to release wire

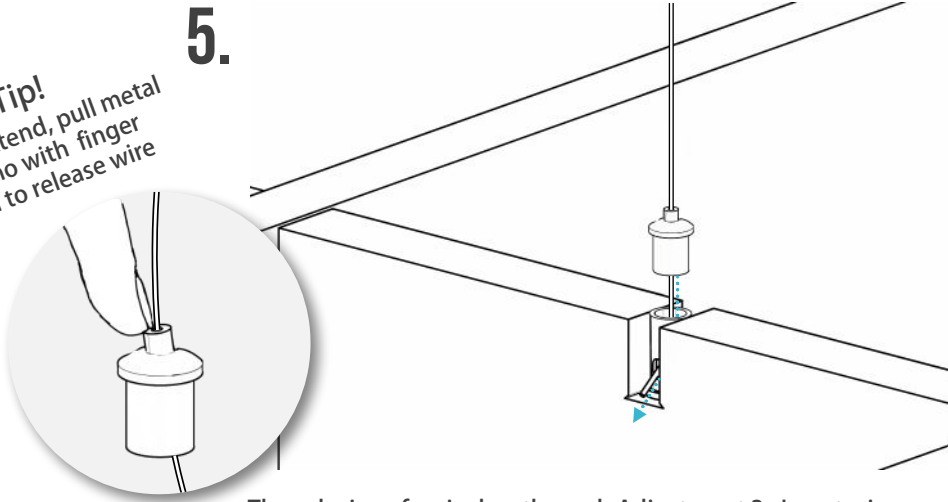

Thread wire a few inches through Adjustment 3. Insert wire through adjustment 4.
Screw both adjustments till tight.


5.A.

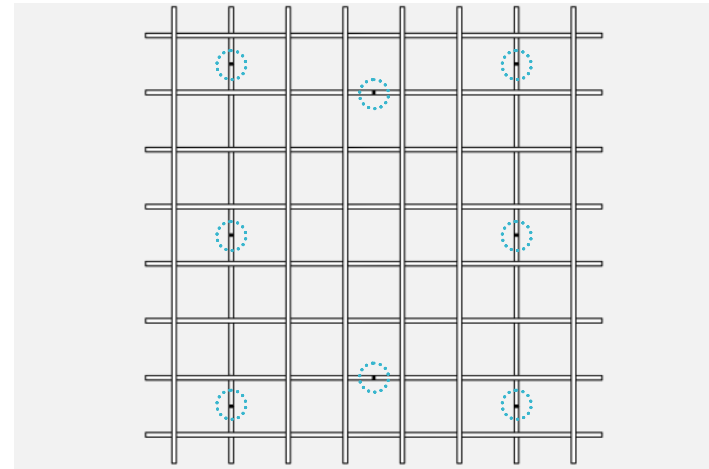

*Recommended
distance from
ceiling: 250mm


Apply this to all 6 fitment spots.
Adjust all wires to the desired height using accurate measuring*

6.

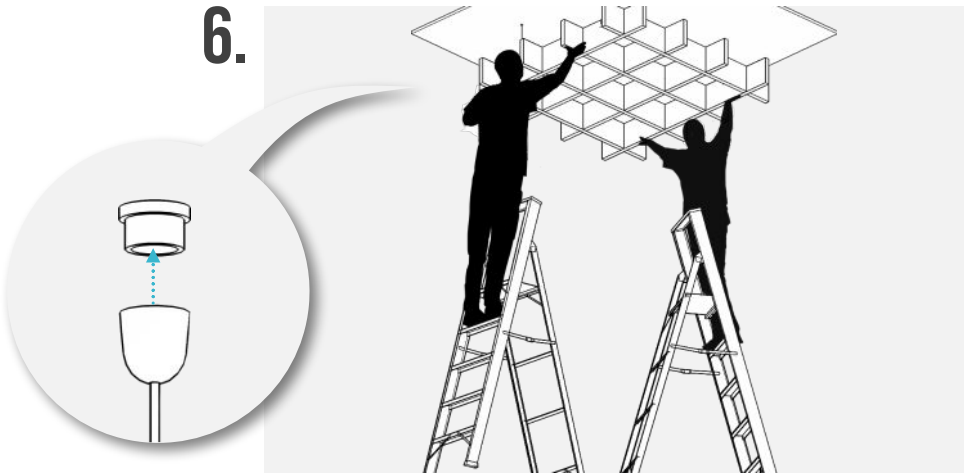

Using responsible safety measures, lift to designated spot using two people.
Screw all 6 of adjustment 2 into all 6 of adjustment 1 to ceiling.
Attach opposite corners first then move on to the rest.


7.

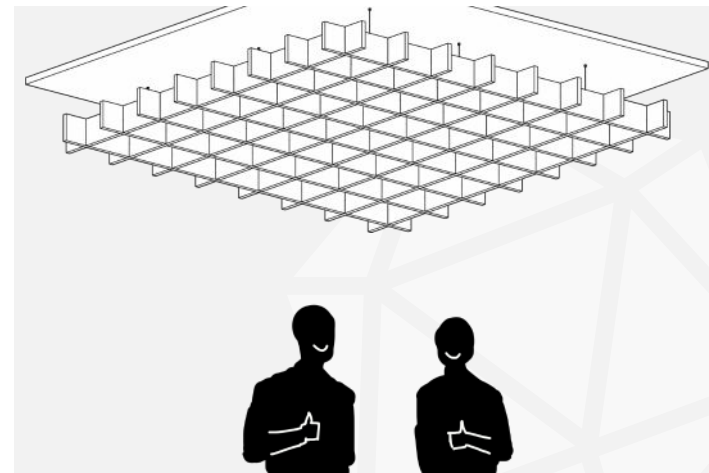

Adjust wire length if needed. Enjoy your finished Matrix


5.

Push until flush
against baffle

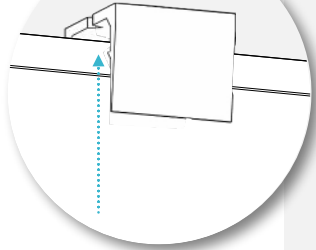


Using responsible safety measures, lift to designated spot using two people.
Firmly push Matrix into Direct Fix Clips™ into points marked in 5.A

5.A.

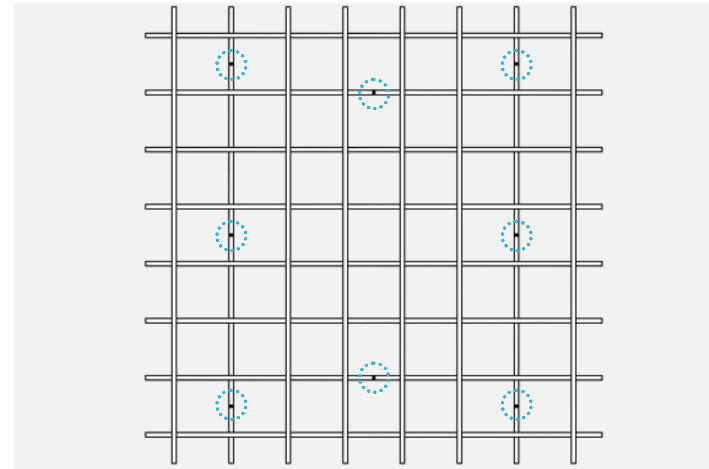

When attaching Matrix to ceiling, push into Direct Fix Clips™ firmly, until they are flush against ceiling surface. They will align with suspension points as marked.

6.

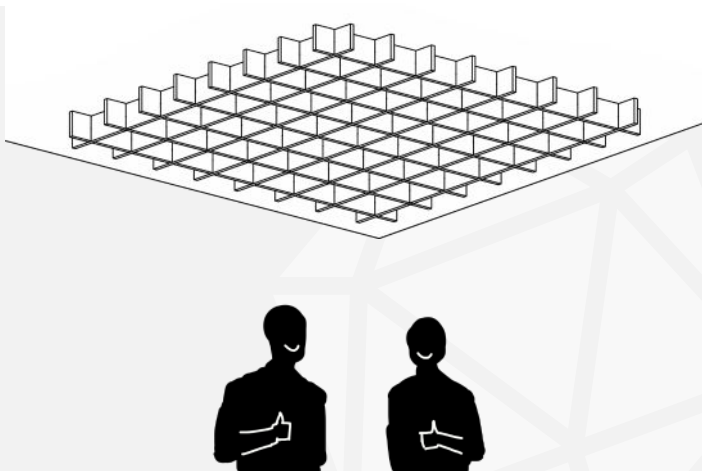

Enjoy your finished Matrix